



USER MANUAL | CZ-716/Qi XE PRO

Hello.

Congratulations on purchasing your new Cozzia Qi XE PRO.

At Cozzia we understand that every body is different and have carefully designed your massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.




Our team will respond quickly to help you solve any issues

1.877.977.0656

Need a deeper massage? Remove Softening Pad

- 1 Unzip
- 2 Fold Down
- **3** Remove Pad

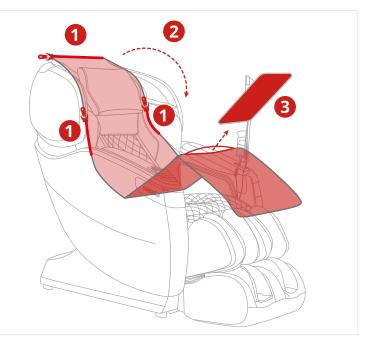

Scan QR Code to Visit Website

Scan QR Code for Operation Video

Scan QR Code for Service Support





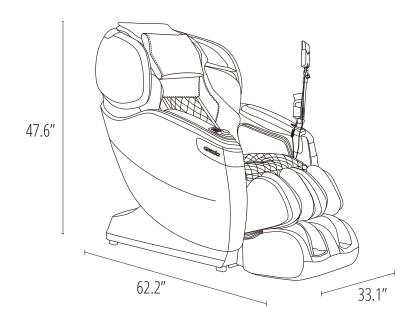



TABLE OF CONTENTS

INTRO	Dimensions Contents	
	Move & Clearance Components	6
CHAIR	Massage Points Specifications	
	Interface	9-12
	Auto Massage	13-18
	Try Me	10.00
MASSAGE	Custom Massage	21-27
	Spot Massage	28-30
	Chair Doctor	31-34
	Settings	
	Application Interface	45-67
	Auto Program Descriptions	68-75
	Safety	76-77
	Grounding Instruction	
A	Troubleshooting	
CARE	Care and Storage	
	Warranty	79-80

DIMENSIONS

First, let's get your chair inside.



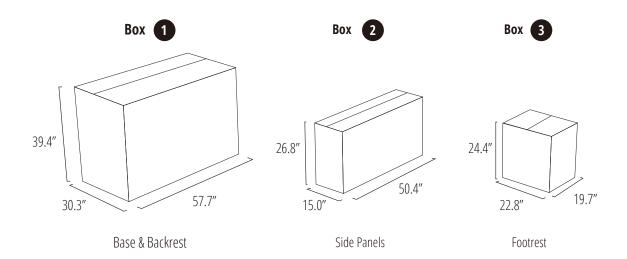

CONTENTS

Everything you need for a relaxing experience.



User Manual




Installation Manual



Warranty Postcard



Power Cord

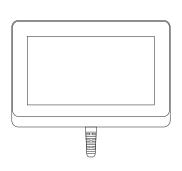

Wired Touch-Pad



CZ-716 Massage Chair


Move & Clearance

A few simple steps to find the best place for your new chair.

HOW TO MOVE




Move with a slight pull or push Caution: If you roll the chair on wood floor, marks may be left

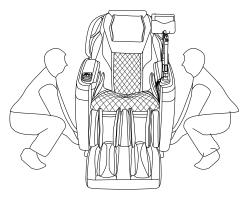


Two people are needed to lift the chair

CLEARANCE

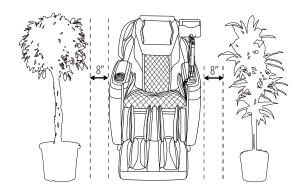


Reserve space on the left and right

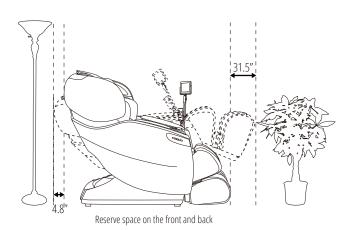

CHAIR COMPONENTS

Some of your chair's most important features.

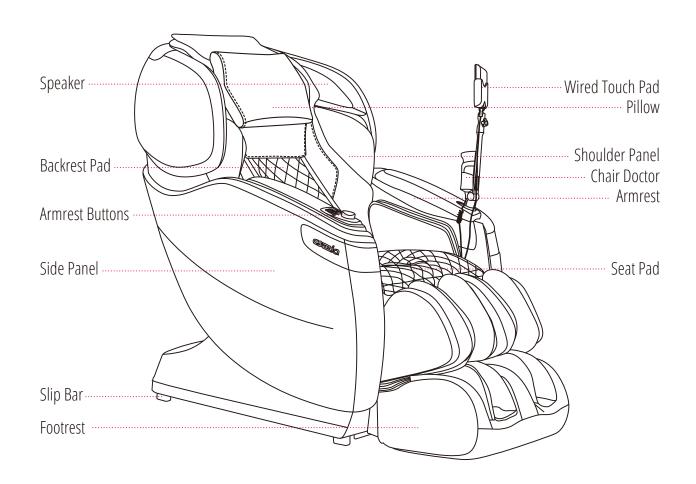


Note: The speaker will only operate when the massage chair is in operation



To play music using your massage chair's speakers please connect your smartphone, tablet, or other electronic device to your chair using bluetooth. Note that the code to connect the bluetooth is Qi XE PRO.

MASSAGE POINTS

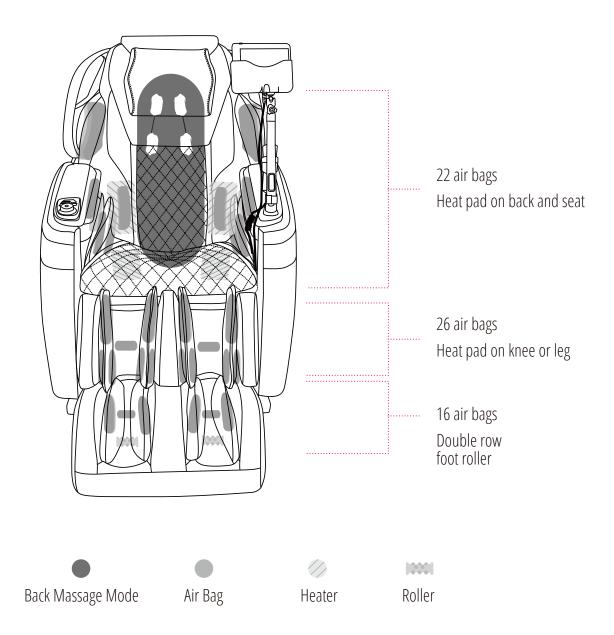

CHAIR SPECIFICATIONS

A few important facts about your massage chair.



Model No. CZ-716/Qi XE PRO



Massage Time 5 to 30 Minutes



Dimensions (L x W x H)
Chair dimensions: 62.2" x 33.1" x 47.6"
Reclined dimensions: 77.2" x 33.1" x 41.3"



Shipping WeightGross weight: 302.4 lbs
Net weight: 258.9 lbs



Usage ConditionEnvironment temperature: 10 °C-40 °C
Contrasting humidity: 30-85RH



Storage ConditionStorage temperature: -20 °C-60 °C
Storage humidity level: 30-85RH



Rated Current 1.5A



Rated Voltage



Rated Frequency 60Hz



Power of Speakers 14W (2 sides)



Length of WiringController wiring: 27.6"
Power supply wiring: 70.9"





Safety Feature
Equipped with child safety lock,
leg rest and backrest safety sensor,
and overheating and power surge detectors


WIRED TOUCH-PAD INTERFACE

We have designed your massage chair's tablet controller with a user-friendly interface to make using your chair even easier.

Home Screen

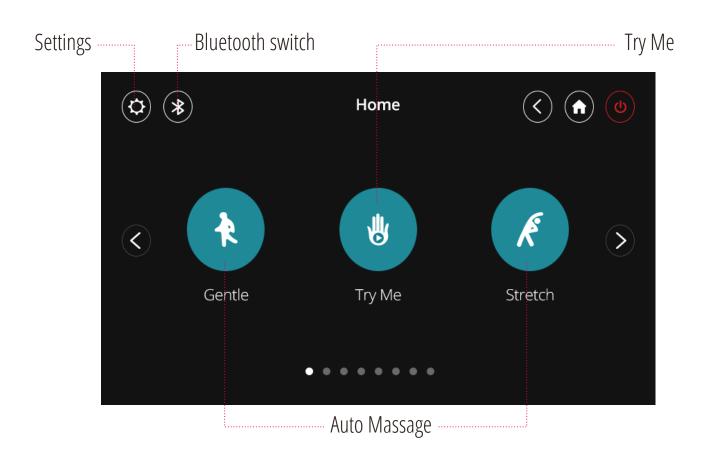

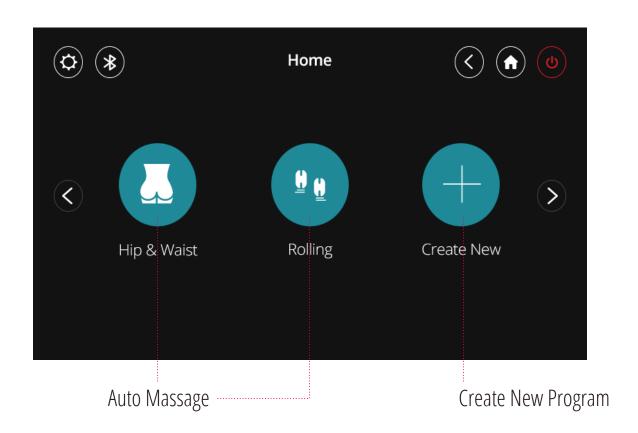


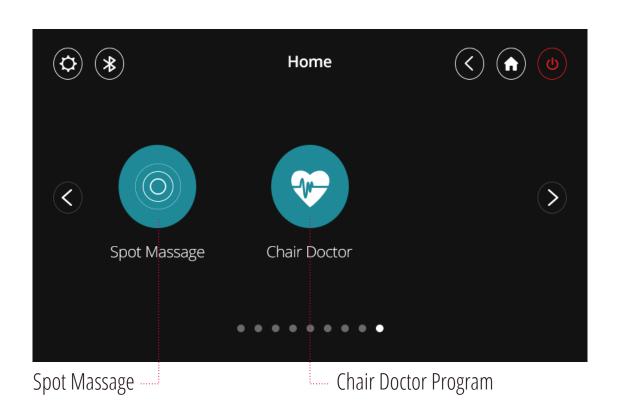

Massage Controls Adjust Strength Name of Program Time Left Power Rolling min Adjust Full - Body Airbags 4D Depth 4D Air Intensity Air Intensity Light Heat Sole Rollers Light Color Variation Select Air Bag Foot Roller Massage Area --- Adjust Chair Angle Back Heat/ Seat Heat/ Leg Heat


AUTO MASSAGE


We have designed your chair with multiple massage options for your changing needs. Follow these simple instructions to begin a new auto massage.

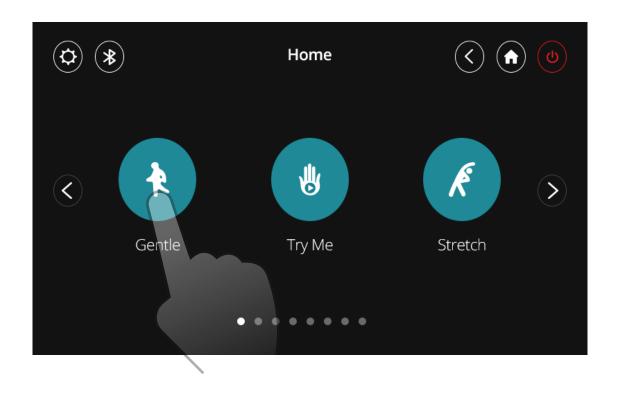

Choose 1 of our 23 pre-programed massages
(Gentle, Try Me, Stretch, Joint Care, Spine Care, Relax, Vigorous, Swedish, Thai, Japanese, Chinese, Balinese, Morning, Night, Al Design, Post Workout, Recharge, Neck&Shoulder, Lower Back, Upper Back, Lower Body, Hip&Waist, Rolling)


Auto Massage Interface

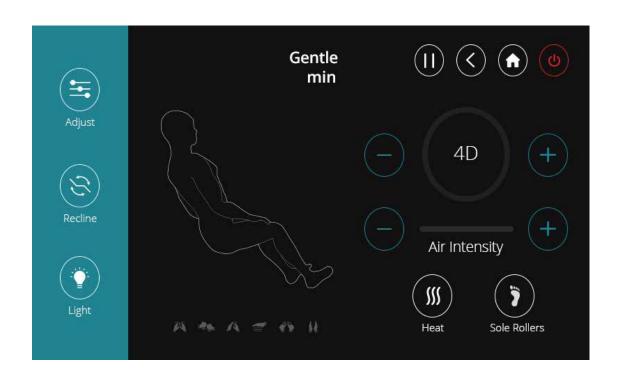

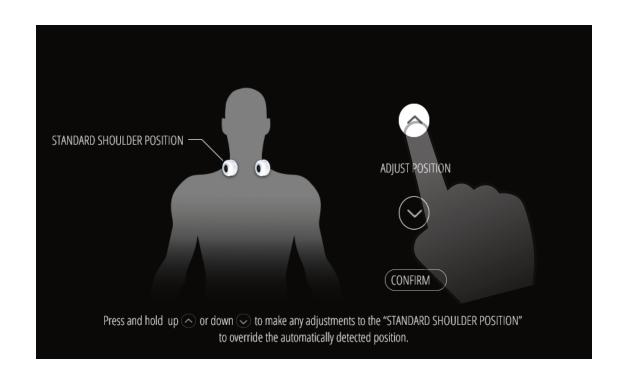

Using the arrows, you can adjust the standard shoulder position

Adjust Massage Strength Interface

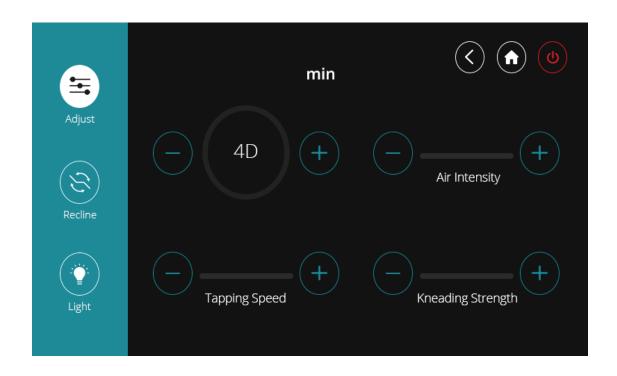


In this interface, you can adjust massage 4D strength, tapping speed, kneading strength and air intensity

Adjust Chair Angle Interface



Adjust your chair quickly by choosing one of the three preset seating positions. You can also press and hold the arrows to adjust parts of the chair independently


Change the Light Interface

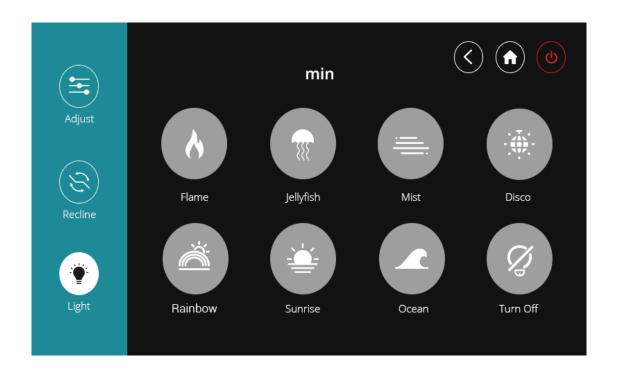

Choose 1 of the 7 types of LED light patterns


TRY ME

In order to allow you to quickly understand the many features of this massage chair, we have created a Try Me program for you.

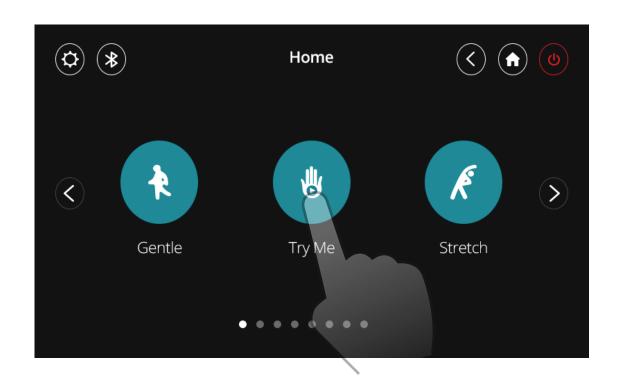

Choose the "Try Me" icon to begin the Try Me program


Try Me Interface

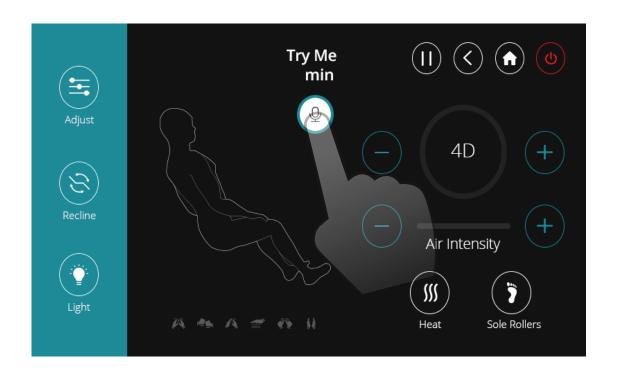


Click the icon to turn on or turn off the voice introduction of the chair features

CUSTOM MASSAGE


Every body is different. That's why we've given you the option to customize your massage to meet your specific needs. Follow these simple instructions to create a new custom massage. You can create up to 3 custom programs. To delete a custom massage program, press and hold the icon of the massage you want to delete and choose the "x".

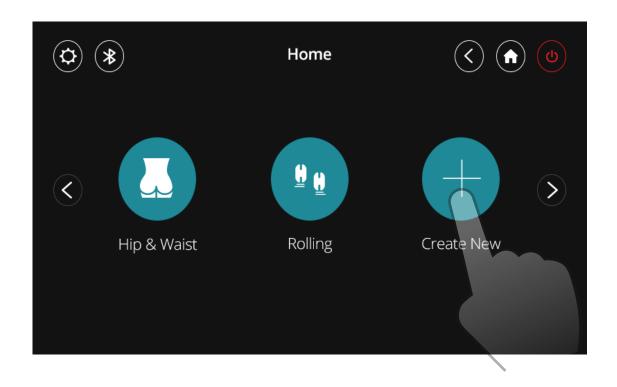


Choose the "Create New" icon to begin creating your massage program

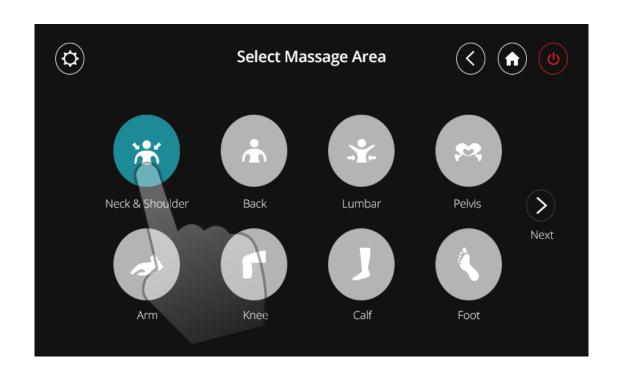


Select the massage area that you prefer

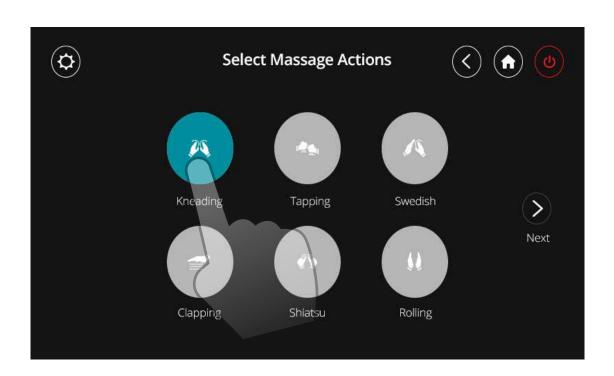


Select your favorite massage actions. The knead, tap, clap, and shiatsu massages can be combined with swedish or roll

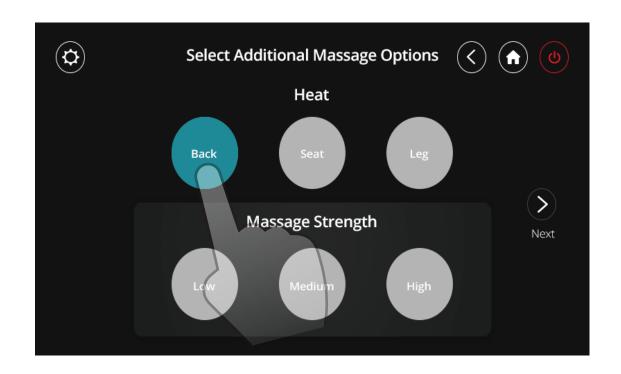

Select the heat area and massage strength that you prefer

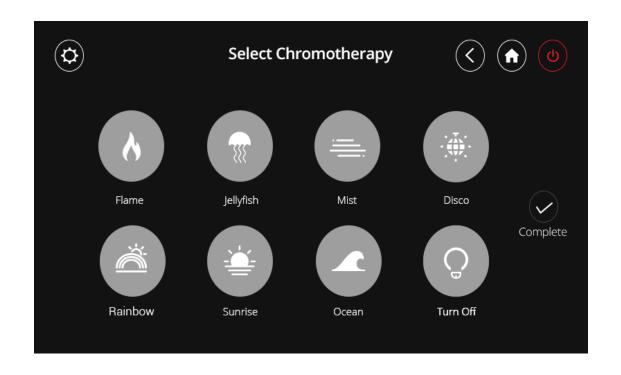


Select the chromotherapy light pattern that your prefer

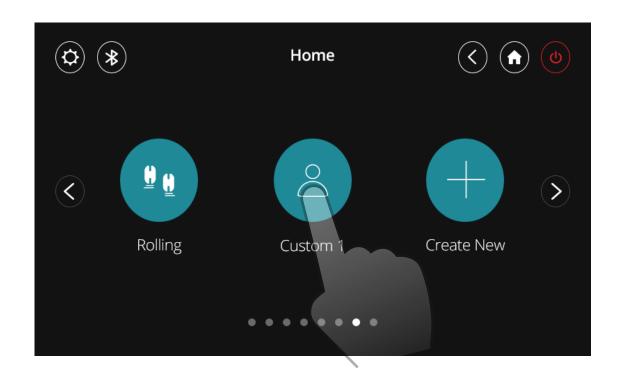


Choose the "Custom 1" icon to start your program

Custom Interface

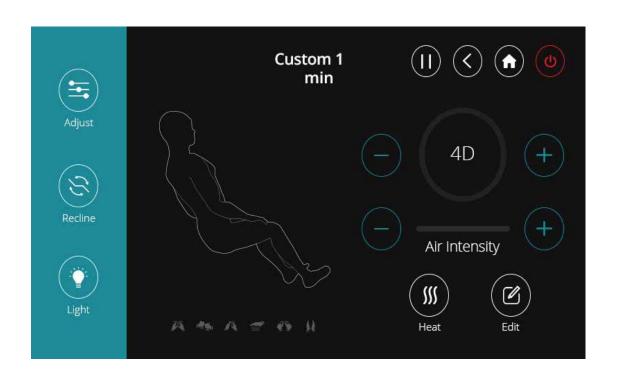


SPOT MASSAGE

This is a fixed massage area and actions program.

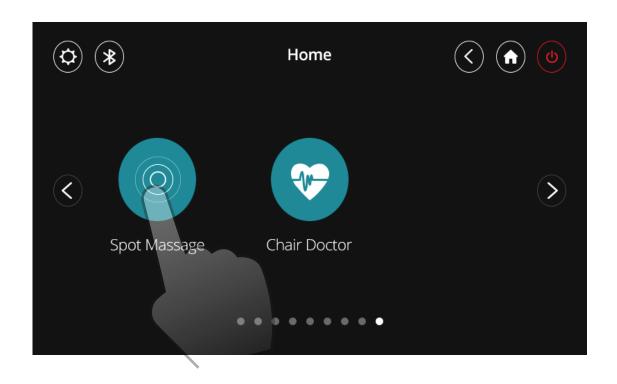


Choose the "Spot Massage" button to take you to the spot massage page

Spot Massage Interface 1

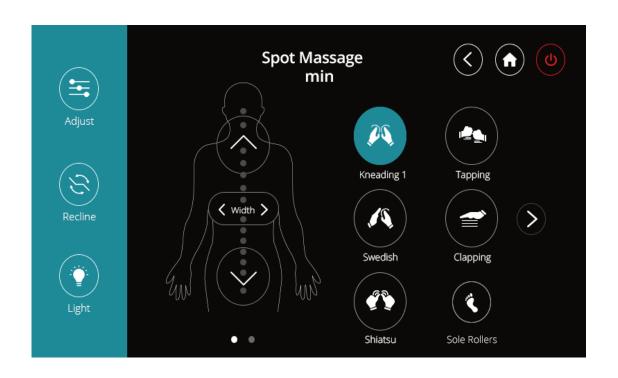


Spot Massage Interface 2

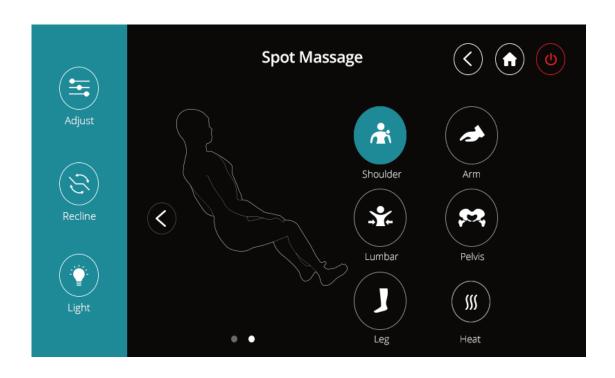


CHAIR DOCTOR

An innovative tool that diagnoses your body tension, SpO2 (oxygen saturation), and heart rate, to treat your unique body.

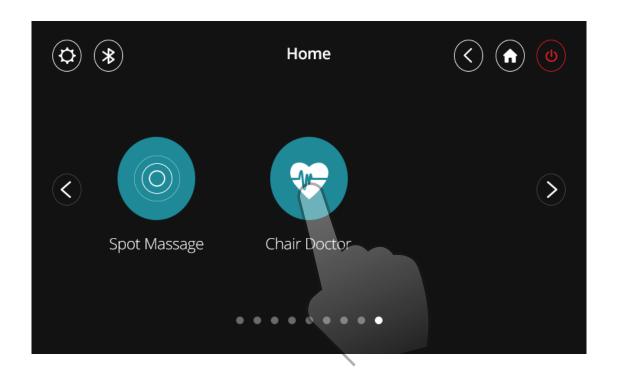


Choose the "Chair Doctor" button to take you to the chair doctor page


Chair Doctor Interface 1

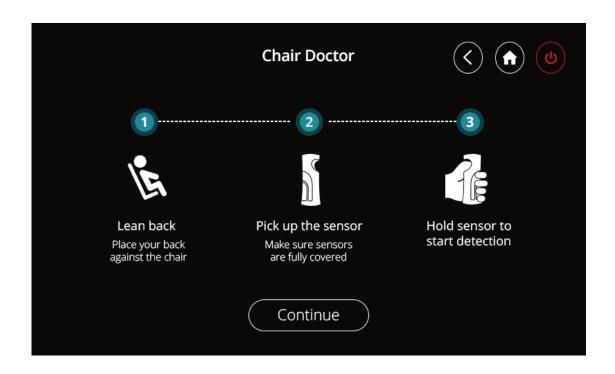


Chair Doctor Interface 2

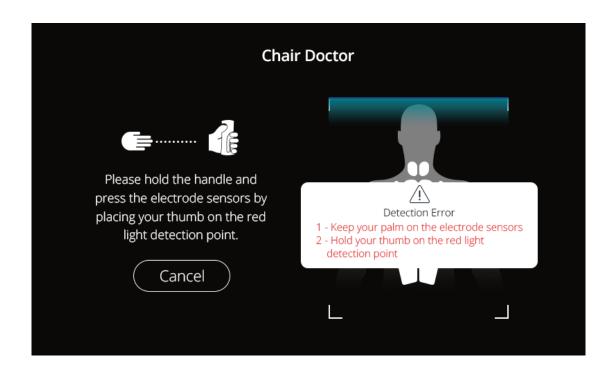

Chair Doctor Interface 3

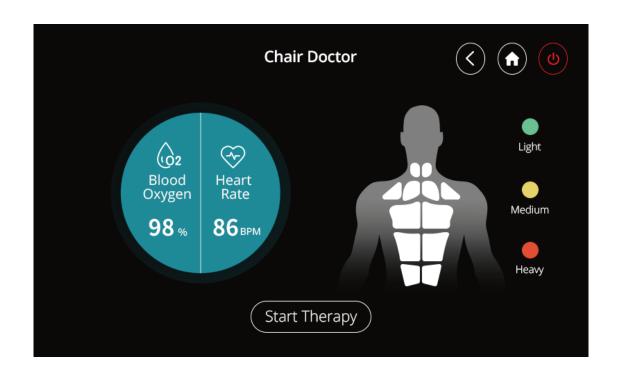

SETTINGS

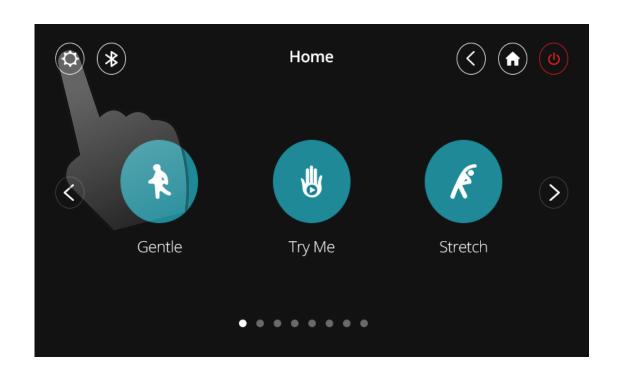


Choose the "Settings" button to take you to the settings page


Settings Interface



Child Safety Lock

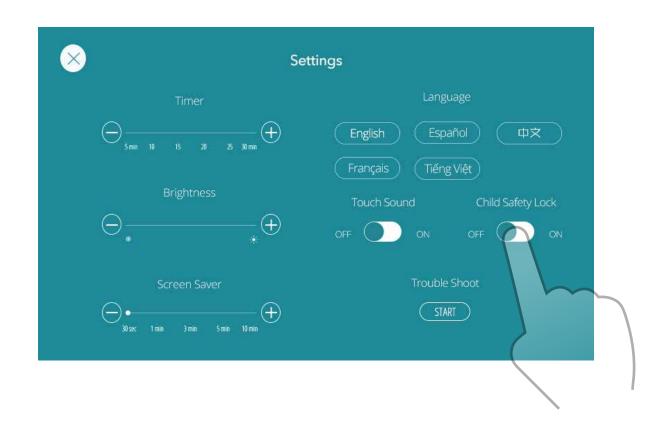

To disable this chair for child safety, set the Child Safety Lock setting to "ON" $\,$

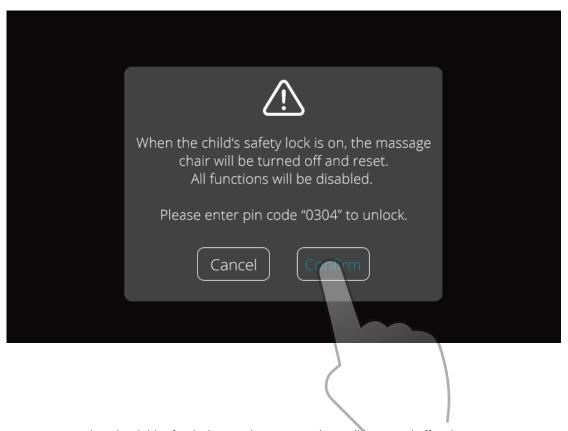


When the child safety lock is on, the massage chair will be turned off and reset.

All functions will be disabled. Please enter pin code "0304" to unlock




When the child safety lock is enabled, this screen will appear at startup. Please click anywhere on the screen to begin the unlocking process

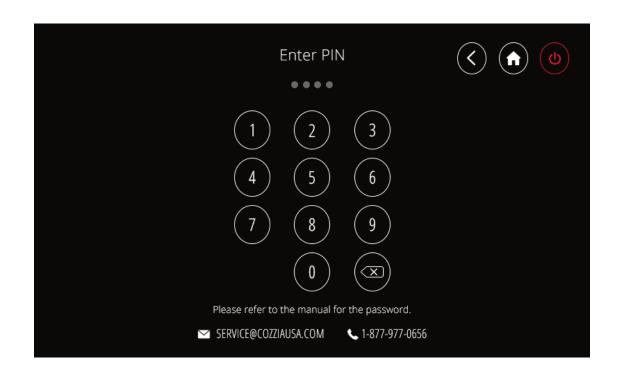

Please enter "0304" to unlock your massage chair


Trouble Shooting

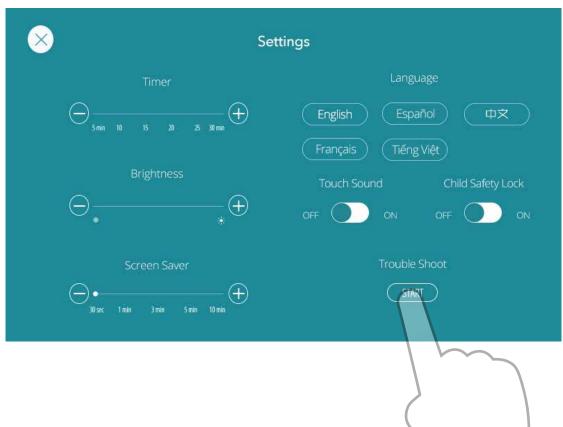


If your chair has any trouble, press the Trouble Shoot "Start" button for the chair to automatically detect problem areas. Use the error code provided when contacting our customer service team



Choose "Start" button and make sure the chair is not occupied during chair detection

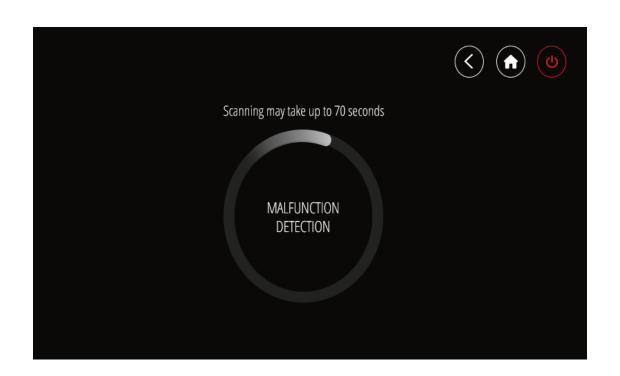

Your chair is detecting possible malfunctions, please wait for the detection result

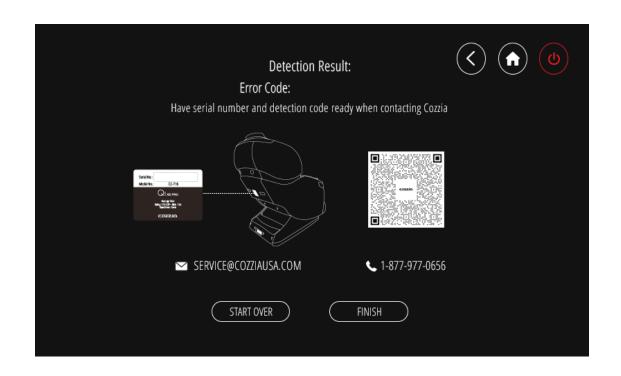


You can use your detection code when contacting the Cozzia customer team about your chair's problems

APPLICATION INTERFACE


Please go to the Google Play or Apple App Store to download our app. You can search for "Cozzia" to find it.

Note: Application may be upgraded periodically for a better experience, some text and pictures below may not be the same as your version of the app.


Chair Connecting

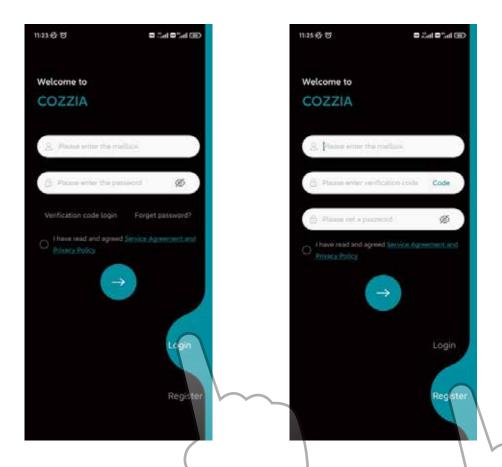


Here you can log in to a registered account. If you do not have an account, please register first

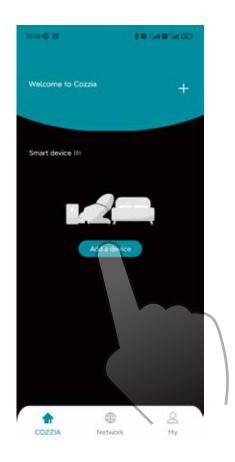



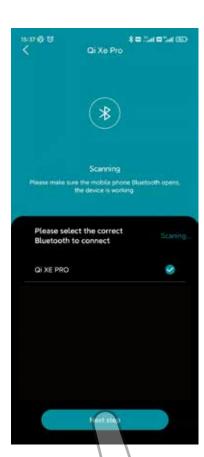


Make sure your smart device's bluetooth is turned on, then click "add a device" to connect your device to your chair

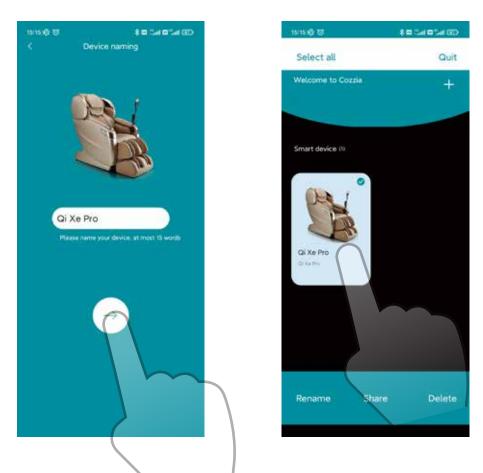

You can name your chair or re-edit the name with a long press of the icon

Voice Control




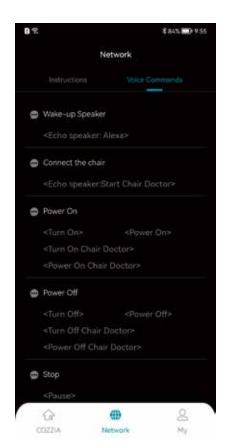




This chair supports Alexa smart speakers (please purchase speakers from Amazon). Follow the above steps to connect to a smart speaker

Home Screen

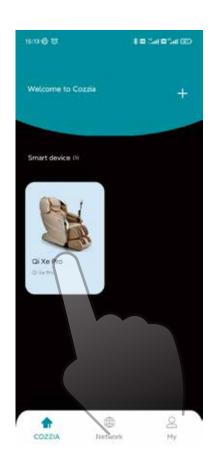

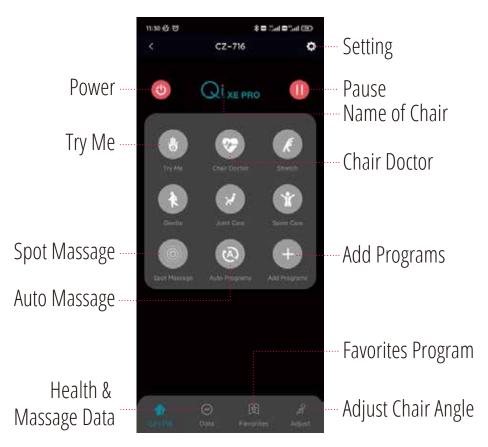


Click the power icon to turn on your chair

Auto Massage Interface





Click this icon to go into the auto program interface, then select your preferred auto program

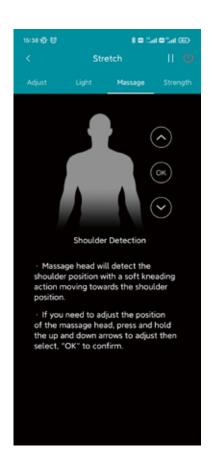







Using the arrows, you can adjust the standard shoulder position

Adjust your chair quickly by choosing one of the three preset seating positions. You can also press and hold the arrows to adjust parts of the chair independently

Choose 1 of the 7 types of LED light patterns

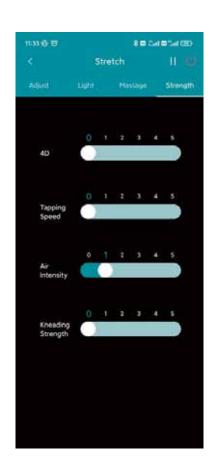


In this interface, you can adjust massage 4D strength, tapping speed, kneading strength and air intensity

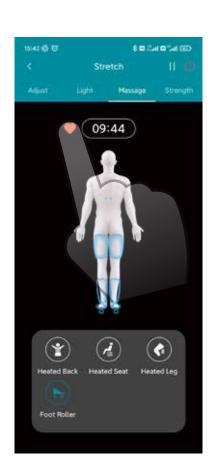

Click the icon to save your preferred auto massages into your favorites

Adding Programs Interface

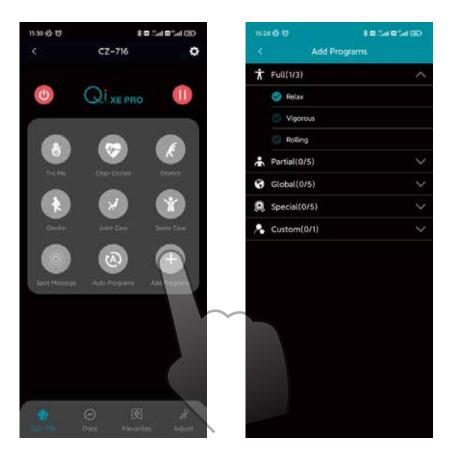




Choose your preferred auto massages to add to the home page


Chair Doctor Interface





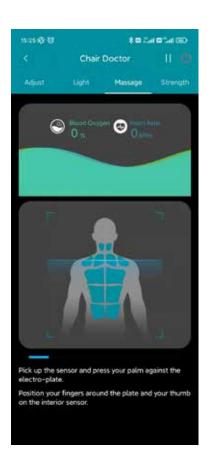

Follow these simple instructions to begin a new diagnosis

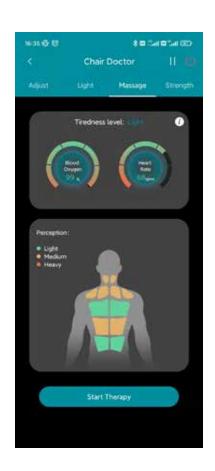



After diagnosis, the chair doctor will generate a course of treatment that best suits your needs. Select "Start Therapy" to begin the specially crafted massage

Spot Massage






Click the "Spot Massage" button to take you to the spot massage page

Custom Massage




Choose the "Create New" icon to begin creating your massage program

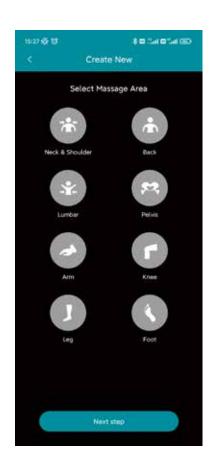

Select the massage area that you prefer



Select your favorite massage actions. The knead, tap, clap, and shiatsu massages can be combined with swedish or roll

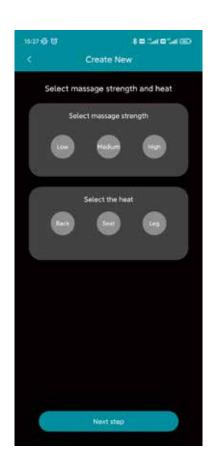

Select the heat area and massage strength that you prefer



Select the chromotherapy light pattern that your prefer







Choose the "Custom 1" icon to start your program

Data Interface



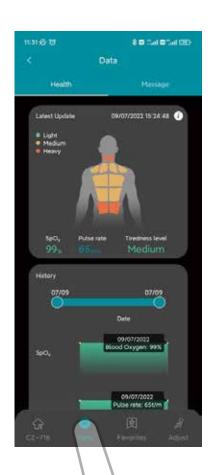

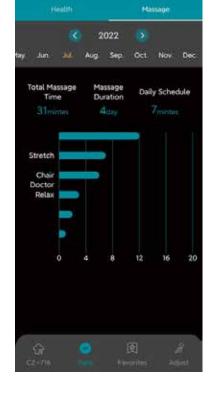


加加金世


Check your health and massage data

Favorites Interface




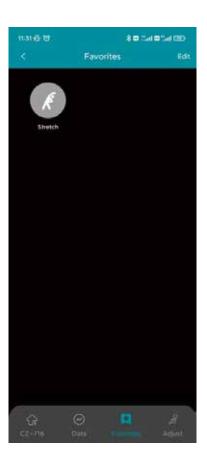

Adjust Chair Angle Interface

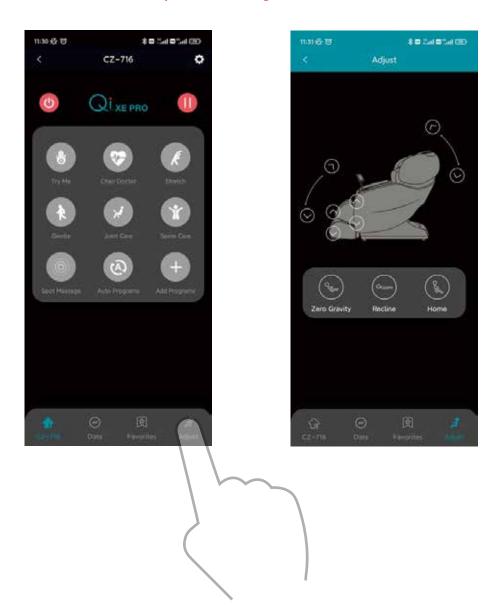



Settings

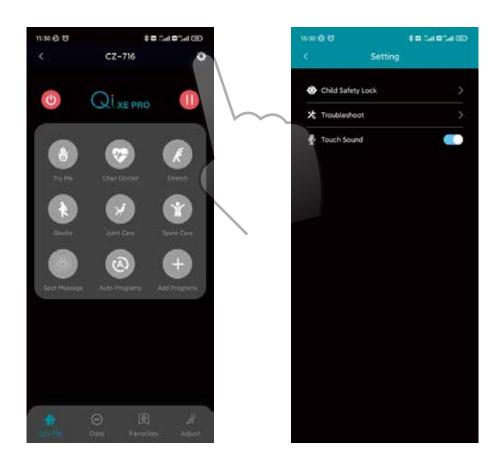

Click the "Settings" icon to take you to the settings page

Child Safety Lock

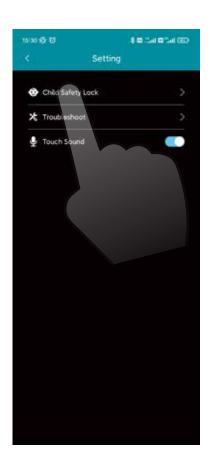

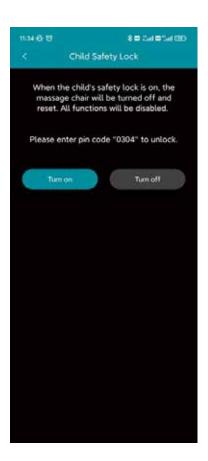



When the child safety lock is on, the massage chair will be turned off and reset. All functions will be disabled. Please enter pin code "0304" to unlock

Trouble Shooting







If your chair has any trouble, press the Trouble Shoot "Start" button for the chair to automatically detect problem areas. Use the error code provided when contacting our customer service team



You can use your detection code when contacting the Cozzia customer team about your chair's problems



Click the icon to get the detection code

AUTO PROGRAM DESCRIPTIONS

Let's dig a little deeper and discover the details of our pre-programmed massages.

TRY ME



A 5 minute whole body massage for those on the go.

FOCUS AREA



INTENSITY





FOCUS TECHNIQUE







KNEADING ROLLING TAPPING

GENTLE



A program designed to provide a quiet, gentle massage that is good for beginners or those that prefer a soft touch.

FOCUS AREA



INTENSITY







KNEADING ROLLING

FOCUS TECHNIQUE

Stretch



This massage will stretch your legs and back with a combination of gentle tapping, rolling, and air compression.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE





KNEADING TAPPING

RELAX



A program designed to provide a mild massage that is great for deep relaxation, best used before going to sleep.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE






KNEADING SWEDISH

Spine Care



This massage will focus on your lower back with a deep massage that includes air compression.

FOCUS AREA

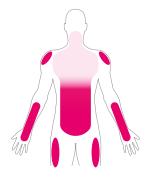

INTENSITY



FOCUS TECHNIQUE





SHIATSU SWEDISH

Joint Care



A massage program that focuses on the joints and provides heated knee compression.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE





KNEADING TAPPING

Swedish



This massage will focus on your neck down to glutes in the beginning then finish with a soothing rocking motion.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE





KNEADING TAPPING

Vigorous



This massage will combine vigorous tapping on your lower back and an air massage focused on your thighs and legs.

FOCUS AREA





INTENSITY



TAPPING KNEADING


FOCUS TECHNIQUE

Thai



This massage will focus on your mid back and upper shoulders with a deep tissue massage using the shiatsu technique that will create an acupressure effect.

FOCUS AREA

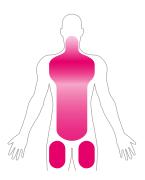

INTENSITY







FOCUS TECHNIQUE


KNEADING TAPPING

Japanese



A program designed using Japanese-inspired techniques to improve your immune system, blood circulation, and aid in pain relief.

FOCUS AREA

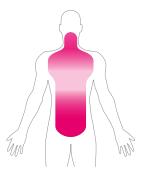

INTENSITY



FOCUS TECHNIQUE





SHIATSU KNEADING

Chinese



This massage will focus on your entire back while also massaging your legs and feet.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE





KNEADING TAPPING

Balinese



This massage will focus on your back and spine using fast, ultra kneading and tapping techniques.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE





SHIATSU KNEADING

Morning



This program is a relaxing

FOCUS AREA





INTENSITY







KNEADING SWEDISH

massage that will help ease you into your day.

Night



The program is a calming massage that will get your mind and body ready for bed.

FOCUS AREA



INTENSITY





FOCUS TECHNIQUE





KNEADING TAPPING

Al Design



This is a full body program that creates the most accurate and suitable massage for the human body

FOCUS AREA



INTENSITY







FOCUS TECHNIQUE





SWEDISH KNEADING

Post Workout



A program that is designed to help your muscles recover and to relieve body tension after you exercise.

FOCUS AREA



INTENSITY

FOCUS TECHNIQUE







KNEADING SWEDISH TAPPING

Recharge



Use this program when you are tired to reenergize your body.

FOCUS AREA



REA INTENSITY



INTENSII



FOCUS TECHNIQUE





KNEADING ROLLING

Neck & Shoulder



This massage will focus on your shoulders and neck using a combination of kneading and shiatsu techniques.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE






KNEADING TAPPING

Lower Back



This massage will focus on your lower back with a deep massage that includes air compression.

FOCUS AREA

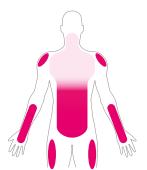

INTENSITY



FOCUS TECHNIQUE





TAPPING KNEADING

Upper Back



This massage will focus on your neck, shoulders, and legs with a slow massage that incorporates soothing heat.

FOCUS AREA



INTENSITY



FOCUS TECHNIQUE








KNEADING TAPPING SWEDISH

Lower Body



This is a partial body program that focuses air compression and vibration on the lower body.

FOCUS AREA

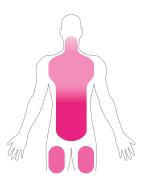

INTENSITY



FOCUS TECHNIQUE




KNEADING ROLLING





A program that helps you relax your waist and hip muscles.

FOCUS AREA

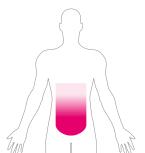

INTENSITY



FOCUS TECHNIQUE




CLAPPING TAPPING

Rolling



This program will massage from your neck down to your hips, using the ultra rolling technique.

FOCUS AREA

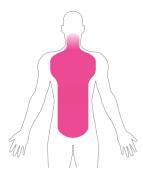

INTENSITY



FOCUS TECHNIQUE



ROLLING

SAFETY PRECAUTIONS

We're looking out for you.

IMPORTANT SAFFTY INSTRUCTIONS

When using the massage chair, basic precautions should always be followed, including the following: Read all instructions before using this massage chair.

DANGER - To reduce the risk of electric shock:

- Always unplug this massage chair from the electrical outlet immediately after using and before cleaning.
- · Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Call for service if the covering shows any sign of deterioration, such as blistering, peeling or cracking.
- · Keep dry do not operate in a wet or moist condition.

WARNING - To reduce the risks of burns, fire, electric shock or injury to persons:

- · Read all instructions before using.
- A massage chair should never be left unattended when plugged in. Unplug from the outlet when it is not in
 use and before putting on or taking off parts.
- Close supervision is necessary when this massage chair is used by or near children or disabled persons.
 Keep children away from reclining backrest and extended leg rest.
- Use this massage chair only for its intended use as described in this manual.
- Never operate this massage chair if it has a damaged cord or plug, if is not working properly, if it has been
 dropped or damaged, or dropped into water. Contact customer service department.
- · Keep the cord away from heated surfaces.
- Never operate the massage chair with the air openings blocked. Keep the air openings free of lint, hair and
 the like.
- · Never drop or insert any object into any opening.
- · Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Do not stand on or in the massage chair. Use only while seated.
- The product is not intended for use by children or persons with reduced physical, sensory or mental
 capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
 concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an
 infant or invalid or on a sleeping or unconscious person. Check the skin in contact with the heated area of the
 appliance frequently to reduce the risk of blistering.
- · Burns may result from improper use.
- · Do not crush in order to avoid sharp folds.
- · Keep children away from extended foot support (or other similar parts).

- DO NOT WFT.
- · DO NOT USE PINS.
- NEVER REMOVE COVER.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

1. Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- · Do not expose the massage chair to heaters, stoves or direct sunlight.
- · Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.



- This massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait for one hour before use. This is because its performance may not be at an optimal level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction

2. Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this
 operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse
 effects on the user.
- Do not allow children or pets to play around the massage chair, e.g. behind the backrest, under the seat base or legrest of the massage chair. This may result in injury.
- · Do not use the massage chair when your body is wet.
- · Do not operate the massage chair with wet hands.
- It is not recommended to use the massage chair for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5
 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this
 may cause injury.
- · Stop operation immediately if you feel any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- · Please do not use the product if you are not feeling well.

3. People with Medical Conditions

Consult your doctor before use if you:

- · Are under medical rest as ordered by a doctor.
- Have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- · Have back problems.
- · Have diabetes, osteoporosis or sensory impairment.
- · Have joint dysfunction such as rheumatism, hammertoe or gout.
- · Have a pacemaker or other electronic medical devices.
- · May be pregnant.
- · Have phlebitis or thrombosis.
- · Have an increased risk for blood clots.
- · Had recent surgery.
- · Have surgical pins, screws, or anything mechanical in the legs, ankles or feet.



- · Avoid using the massage chair under the influence of alcohol.
- Do not apply massage rollers directly on the head, elbow or knee joints, torso or abdomen.
- If your legs or feet slip off the leg rest during massage, do not force them back in as this may result in injury.
- Remove the power plug from the electrical outlet immediately should liquid be accidentally spilled onto the massage chair. Do not use wet hands to connect or disconnect the power plug from the electrical outlet.
- Do not tamper with the power cord or use the massage chair with a damaged cord as this may result in malfunction and electric shock.

4. Instances When the Massage Chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If liquid is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor
- If you detect any malfunction or any other abnormal condition during operation.
- If there is power failure. Injury may occur when power is restored unexpectedly.
- · If there is lightning.

5. Assembly and Repair of the Massage Chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electrical shock.
- This massage chair must only be professionally serviced or repaired. Only disassemble or repair the massage chair if directed by a Cozzia service rep.

6. Things to Be Noted About the Power Plug and Cord


- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- · When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch
 off the main power after use.
- · Do not place the power cord under the massage chair or under any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord that has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if it will not fit the outlet. Have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120V circuit and has a grounding plug that looks like that plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

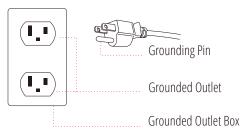

TROUBLESHOOTING

This massage chair is controlled by a microcomputer and is thus susceptible to power surges of +10 to -15%. The following situations may arise in the event of a power surge:

Situation	Solution		
The massage chair is connected to the power supply but is not functioning	Check to see that the plug is properly connected and working Ensure the massage chair switch is in the 'I' position		
The remote control works but the massage chair is not functioning	Possible overheating due to prolonged use. Turn off the power for at least 30 to 50 minutes		
Both the remote control and the massage chair are not functioning	Ensure the chair is plugged into a working outlet Turn the power OFF and ON again		

If you continue to have problems, please read the warranty card and contact the Cozzia service department.

PRODUCT CARE AND STORAGE

1. Storing the Massage Chair

- Wipe off dust and dirt from the massage chair with a dry, soft, clean cloth after use.
- Keep the massage chair clean and away from places of high humidity.
- If the massage chair is not to be used for a long period of time, cover the massage chair with a dust cover and unplug its power plug from the electrical outlet.



Caution

- Do not store the massage chair in direct sunlight or in places of high temperature. This may cause the color of the upholstery to fade.
- Do not allow the massage chair to remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

2. Cleaning the Massage Chair

- Before cleaning, ensure that the main power switch is off and the power plug is disconnected from the
- Wipe off dust and dirt from the massage chair with a dry, soft, clean cloth after each use.
- This product can be cleaned thoroughly with a slightly damp cloth.
- . Do not iron the upholstery.
- Do not wash the upholstery using a home washing machine as this may result in deterioration of the upholstery's quality.



Caution

• Do not use abrasive cleaning agents like benzene or thinner to clean the massage chair. This may cause the upholstery to fade.

3. Cleaning the Controller

· Use only a clean, dry cloth to clean the controller.



Caution

• Do not use a wet cloth to clean the controller. This may result in malfunction.

COZZIA CONSUMER WARRANTY

This Cozzia product has the following warranty:

The Cozzia Qi XE PRO has a three-year in-home service and parts warranty. Cozzia customer service will not issue Return Material Authorizations (RMAs) for products. Cozzia products will be either repaired by the consumer or by an in-home technician. Cozzia will not issue Return Material Authorizations (RMAs) for buyer's remorse.

Service And Technical Support

Consumers may contact Cozzia's customer service department at 1-877-977-0656 between 9:00 am and 5:30 pm PST, Monday through Friday, email us at Service@cozziausa.com, or visit our website at www.cozziausa.com for warranty or service issues.

Consumers are required to provide the unit serial number and dated proof of purchase (sales receipt) when they contact the Cozzia service department regarding a repair.

A Cozzia customer service representative will attend to most consumer inquiries, but in some cases a technical service specialist will provide advanced support.

Non-warranty repair is provided on a "per incident" basis. Cozzia customer service will verify that the unit has failed and provide instructions for repairing the unit. All applicable repairs, parts, shipping, handling, local tax and a "per incident" fee will be charged for non-warranty repairs and support calls.

Proof of purchase (original receipt) is required for all warranty repairs or service.

Extended Warranties:

Cozzia offers extended warranty programs to enhance the ownership of your massage chair. Please call Cozzia customer service at 877-977-0656 for details and pricing.

Product Repairs

- Floor Models and Demonstration Units have a prorated warranty period that begins the
 day the model is placed on the floor and connected to an electrical outlet by the retail partner.
 Proof of purchase is required in order to obtain warranty service and parts. Non-warranty
 parts and service are available at a "per incident" charge.
- Warranty Coverage Period Warranty coverage starts at the time that the consumer PURCHASES their chair. Proof of purchase is required for all warranty repairs. The warranty time period is measured by continuous calendar days based on a seven-day week.
- Field Service Cozzia customer service department will diagnose and schedule an authorized service provider to repair the chair in the consumer's residence.
- Parts All parts deemed necessary for repairs will be shipped to the consumer at no charge by the Cozzia service department. Some Cozzia product repairs may be performed by the consumer in their own home with parts and instructions supplied by Cozzia, such as remote controller replacements that don't require a technician.

CONSUMER WARRANTY LIMITATIONS AND EXCLUSIONS

- Warranties are only valid in the 48 contiguous United States and Canada and are contingent upon the consumer operating the chair according to the corresponding instruction manual.
- The warranty only applies to Cozzia products and does not include any accessories or enhancements.
- Field service requires pre-approval and must be performed by Cozzia's authorized field service personnel.
- Field service is only available in the United States and in major metropolitan areas in Canada.
- Softening of foams and filling composites in pillows, pads, and memory foam occurs naturally and does not
 constitute a defect under this warranty.
- Fading, wear and piling of fabrics occurs naturally and does not constitute a defect under this warranty.
- Warranties do not cover any loss or damage resulting from improper installation, unauthorized repairs or
 modifications, improper use of electrical/power supply, loss of power, dropped product, a malfunction or
 damage of an operating part from failure to provide manufacturer's recommended maintenance,
 transportation damage, theft, abuse, misuse, neglect, vandalism or environmental conditions (fire, floods,
 rust, corrosion, sand, dirt, windstorm, hail, earthquake or exposure to weather conditions).
- Warranties do not cover any loss during the time spent waiting for parts or repairs.
- Damage due to shipping and handling does not constitute a defect under this warranty.
- Under no circumstance shall Cozzia or its representatives be liable for indirect, consequential, or incidental damages (including damages for lost profits, business interruption, bodily injury, medical and the like).
- · Warranties are non-transferable.
- Cozzia's sole liability and the purchaser's exclusive remedy shall be for the repair, or at Cozzia's option, for the replacement of the defective part.
- Notwithstanding the above, if replacement parts for defective materials are not available, Cozzia reserves the right to make substitutions in lieu of repair or replacement.
- All warranties begin on the DATE OF PURCHASE; no allowance or extension is offered for delivery and/or installation.
- Warranties do not apply to rental, business, commercial, institutional or other non-residential users.



861 S. Oak Park Road, Covina, CA 91724

TEL: 1-877-977-0656 FAX: 1-800-521-4712 SERVICE@COZZIAUSA.COM

WWW.COZZIAUSA.COM